 


无极芯隐藏式门铰


左拉开式 (90°定位)			
型号	上铰链	下铰链	承重
WJ307.80R	WJ307BR.80	WJ307BSL.80	80kg
WJ307.60R	WJ307BR.60	WJ307BSL.60	60kg
右拉开式 (90°定位)			
型号	上铰链	下铰链	承重
WJ307.80L	WJ307BL.80	WJ307BSR.80	80kg
WJ307.60L	WJ307BL.60	WJ307BSR.60	60kg
不分左右 (不定位)			
型号	上铰链	下铰链	承重
WJ307.80U	WJ307BL.80	WJ307BR.80	80kg
	WJ307BR.80	WJ307BL.80	80kg
WJ307.60U	WJ307BL.60	WJ307BR.60	60kg
	WJ307BR.60	WJ307BL.60	60kg

## 產品明細

 只有下铰链需要安裝承重垫片，  
上铰链底座不需安裝此組件。

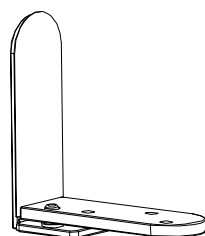

不定位




(1)



(1)



 (1)



(1)



(1)



(6)



(1)




(1)


≥38mm



 
WJ307.60用

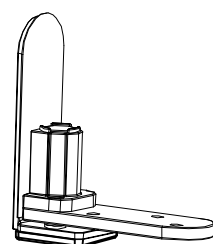


90°定位

 

 
(1)



 
(1)



 (1)



 (1)



(1)



(6)



(1)



(1)


≥45mm




WJ307.80用

门扇厚度


# 安装步骤

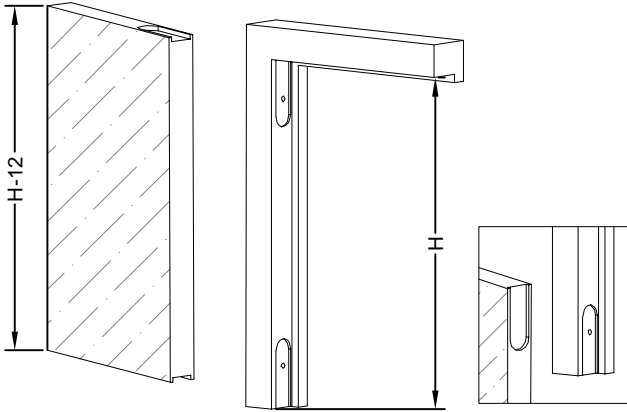 

 
1. 确定安装位置，按照纸规开孔。

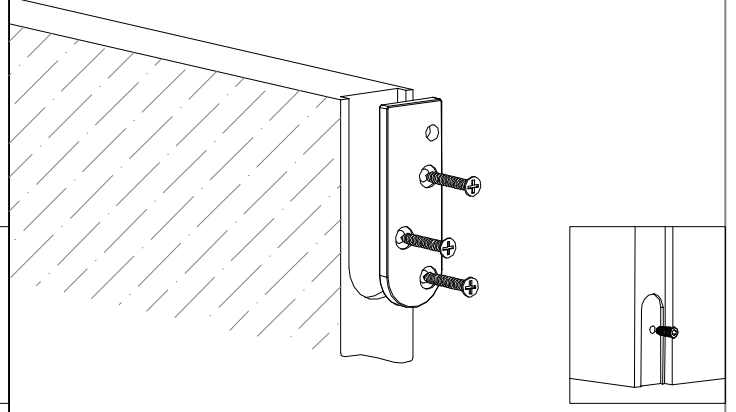

 
2. 安装自攻螺套于门框开孔位置，以木牙螺丝将铰链主体安装在门扇内。

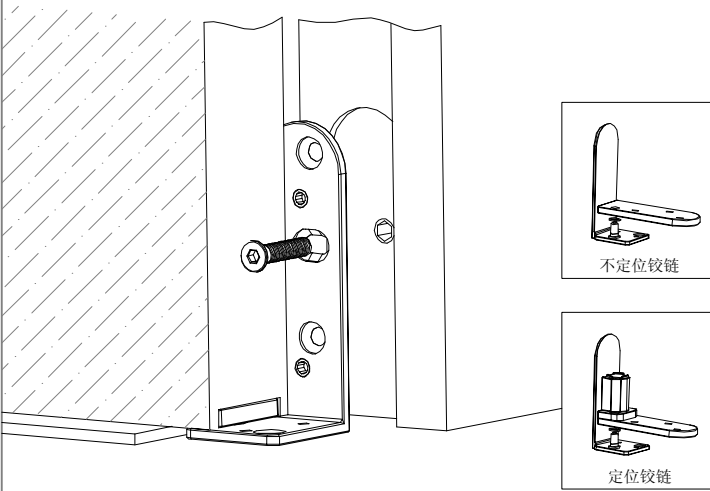

 
3. 垫起门扇，打开铰链至  $90^\circ$ ，下底座套入承重垫片并将铰链底座以机牙螺丝安装在门框上（上铰链底座不需套入承重垫片）。

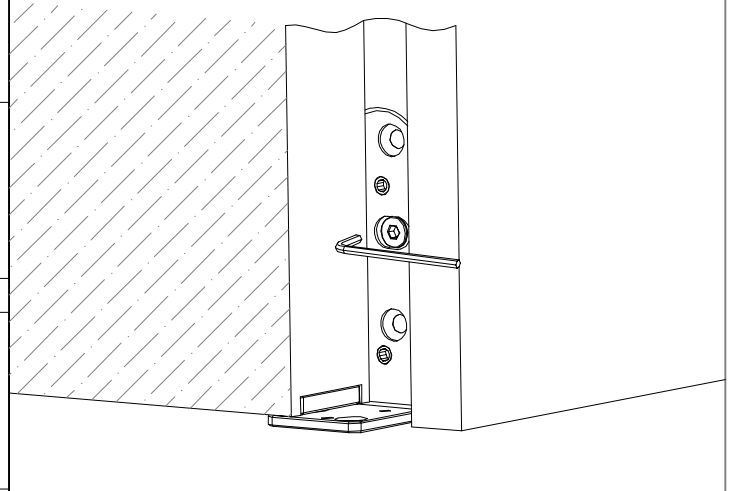

 4. 略松机牙螺丝，手动调节门框方之内外垂直度，完成后收紧所有机牙螺丝。

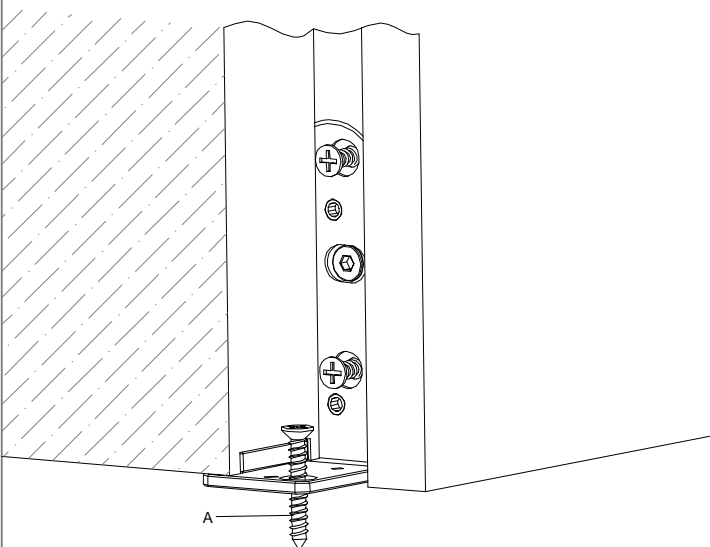

 5. 开关门扇，确定操作顺畅及无异声后，安装所有木牙螺丝（木牙螺丝A可因應场景而选择性安装）。

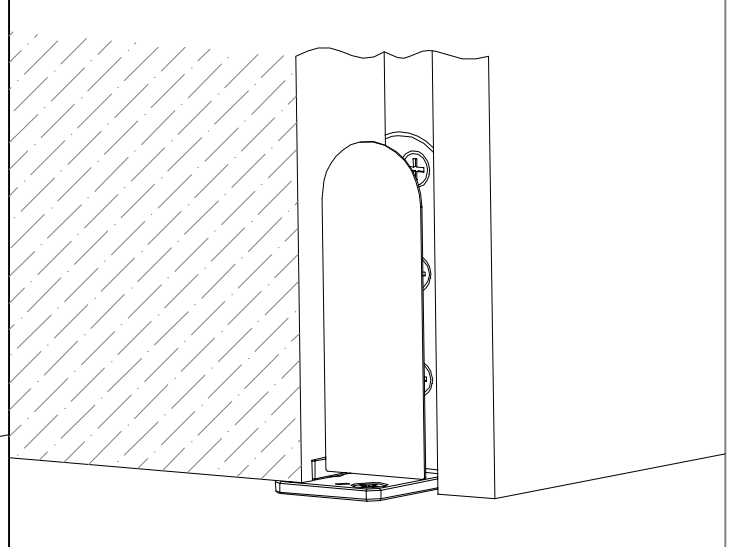

6. 安装面盖，安装完成。