



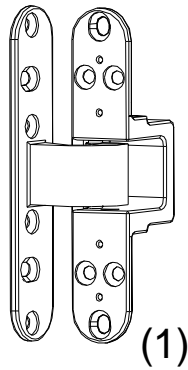


VANISHED HINGE


Model	Loading	Hold-open
WJ201B	160kg	N/A
WJ203B	120kg	
WJ205B	60kg	

Bill of Material

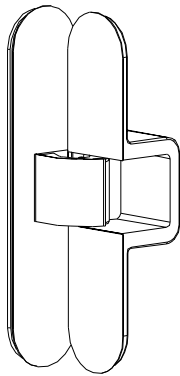


Door Thickness

≥45mm




FOR WJ201B

≥42mm




FOR WJ203B

≥38mm




FOR WJ205B


Installation Guide

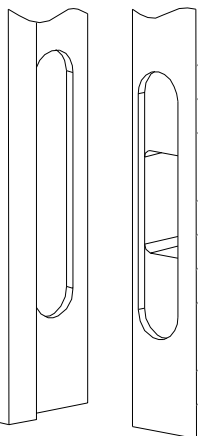


1. Prepare notches according to the template provided.

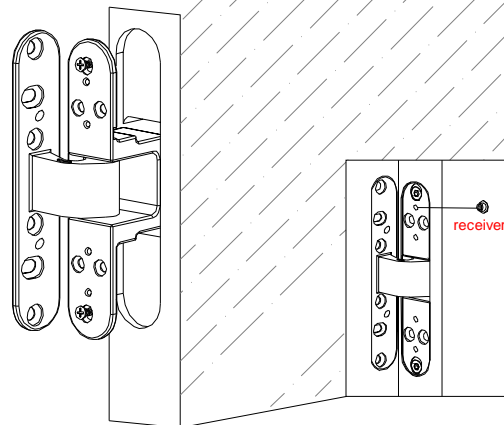


2. Fix the hinges onto door leaf by wood screws to oval holes only (ensure plastic receivers had been fixed properly).

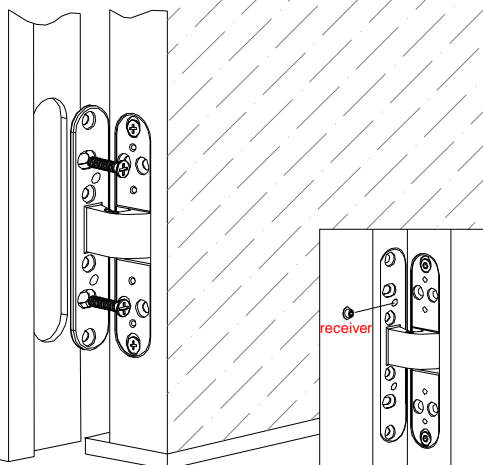


4. Lift up the door leaf and open to 90 °, mount the hinges onto door jamb by wood screws (ensure plastic receivers had been fixed properly).

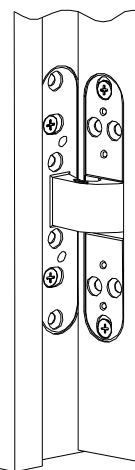

4. Loosen all wood screws slightly, adjust the alignment on both door side and jamb side. Tighten all screws when alignment is ensured.

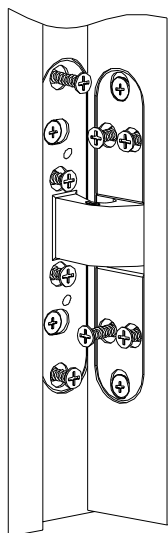

5. After testing the door for smooth operation, fix the rest of wood screws.

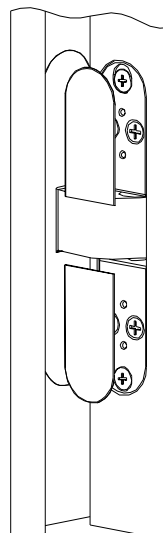

6. Fix the cover plates properly and installation is done.